


Please put the image on the underside area.
Please open the profile above the button clips.



Please be sure that the clipses are closed.



Put the image down to put it on the table.
After you take up the RollUp Mechanism.
Above on there are double bands to take off.
Please put it right on the PVC.
After that you take staple at back to right and left.

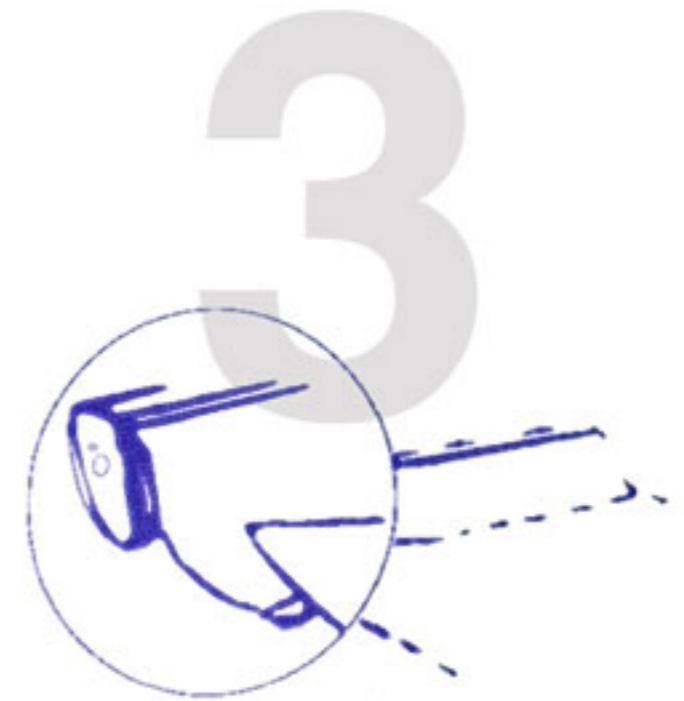

Put the mechanism with your right hand and
take out the key pin from the hole.
Now the mechanism is active.



Please keep the image carefully with your both
hands the mechanism should be taken
horizontal position.



IMAGE SHIFT PRESCRIPTION

Please take off the locking key from the hole and
then the mechanism inside where is the image
should be remove up to end. After you have done
you the locking key should be placed carefully
on the key. After while you paste double band the
PVC which is at the mechanism. In the end you
repeat 1-6 times the rules regarding prescription
after you got RollUps ready.

